 


PAX S80
PAX S90

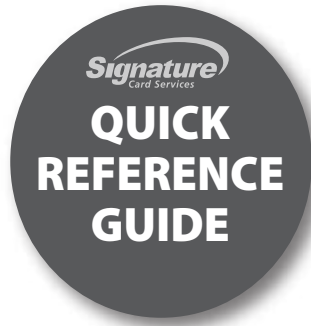

PAX S80
PAX S90



NOTE: Transactions that are manually entered (not swiped) will require you to enter the card number, expiration date, customer zip code and credit card CVV (on back of card) value. The buttons on the right of the screen are F1, F2, F3 and F4.

CREDIT TRANSACTIONS

SALE

Swipe or enter card number
Enter amount, and then press ENTER
Enter tip amount, and then press ENTER
Tear Slip, and then press ENTER to print customer receipt

VOID

Press the ▼ key until V/SALE is displayed
Swipe or enter card number
Enter trans #, and then press ENTER twice
Tear slip, and then press ENTER to print customer receipt

RETURN

Press the ▼ key until RETURN is displayed
Swipe or enter card number
Enter amount, and then press ENTER
Tear slip, and then press ENTER to print customer receipt

V/RETURN

Press the ▼ key until V/RTRN is displayed
Swipe or enter card number
Enter trans #, and then press ENTER twice
Tear slip, and then press ENTER to print customer receipt

SETTLEMENTS/REPORTS

DEFAULT REP

Press the MENU key
Choose 1 – Reports, press ENTER
Enter the device password, and then press ENTER
Choose 1 – Default Report, press ENTER
Tear Slip

CURRENT REP

Press the FUNC key
Choose 1 – Reports, press ENTER
Enter the device password, and then press ENTER
Tear Slip

SETTLEMENT

Press the FUNC + CLEAR keys simultaneously
Choose 1 – tpihc for Credit Card or
Choose 2 – campushc for Campus card, and press ENTER
Choose 1 – Batch Close, and press ENTER
Tear Slip

MISCELLANEOUS TRANSACTIONS

TIP ADJUST

Press the FUNC key
Press the ▼ key until Tip Menu is displayed
Choose Scroll Untipped (or another method).
Press the ▼ key until the transaction you want to add the tip to is displayed. Press the Enter button. Input the tip amount using the number keys and press ENTER.
The terminal will display the new tip amount. Press ENTER to confirm. The terminal will display the new total.



Loading Paper

Pull up on the paper-cover tab to open the paper compartment, insert the paper roll as shown, and then close the paper cover.



Charging

Plug the power supply adaptor to the unit power port located on the left side of the unit. The red LED located by the smart card reader will be lit as shown. When charging is done the LED will be green.

Need Help?

Please contact PAX Customer Care with questions about using your PAX S90 device.

PAX Customer Care

1-904-900-3741 and support@pax.us